

Filters

Keep Up With Filter Maintenance

Clean air, fuel and HVAC filters are all crucial to efficient engine operation. Follow MCI's recommended service intervals:

FILTER MAINTENANCE SCHEDULE		
DESCRIPTION	SERVICE INTERVAL	METHOD
Engine Oil Filter	Every 10,000 miles	Change
Fuel Filter	Every 10,000 miles	Change
Transmission Oil Filter (initial fill)	Initial 5,000 miles	Change
Transmission Oil Filter (normal)	Every 25,000 miles	Change
Transmission Oil Filter (extended)	Every 50,000 miles	Change
Power Steering Filter (reservoir)	Every 225,000 miles	Clean Strainer
Suspension Air Filter	Every 75,000 miles	Replace Element
Air Cleaner	Every 5,000 miles	Inspect / Replace
HVAC Air Filter	Every 5,000 miles	Inspect / Clean
Auxiliary In-Line Air Filters	Every 100,000 miles	Replace Element
Air Compressor Governor Air Filters	Every 50,000 miles	Inspect / Clean
Air System Filter / Dryer (Desiccant)	Every 300,000 miles	Replace Element
CAT OCV Filter (if equipped)	Every 75,000 miles	Change
ISM Closed Crankcase Breather (if equipped)	Every 30,000 miles	Change