

# Driver's Guide

## COMMUTER COACH



Effective with unit number 57956



1. Main Battery Disconnect Switch
2. Exterior Entrance Door and Kneel Switch
3. Fresh Air Control Handle
4. Driver Heater Control Handle
5. Emergency Park Brake Release Valve
6. Wheelchair Lift
7. Lift Control Pendant Switch
8. Horn/Foot Operated on Driver Footrest
9. AMEREX Fire Suppression System Control Panel
10. Electronic Destination Sign Control
11. Electronic Sign System Memory Transfer Unit Connection Port
12. Regeneration Switch

### 2007 EPA Regeneration Tell-Tales

When you see this:



**Regeneration Lamp**  
(DPF) (Yellow)

### Driver Interaction

Do this:

➔ Regeneration is required within the next 5-6 hrs (if ON solid) or 1-2 hrs (if flashing). Drive the coach above 5 mph or perform stationary regeneration. Refer to the latest versions of MCI Service Bulletin 2963 for CAT C13, 2959 for Cummins ISM and 2964 for DDC S60 at [www.mcicoach.com](http://www.mcicoach.com). Tell-tale is OFF during regeneration.



**Regeneration Lamp** and **High Exhaust Temperature Lamp**  
(HET) (Yellow)

➔ Engine derated, regeneration required. Increase speed above 5 mph or perform stationary regeneration within 30 minutes.



**Regeneration Lamp** and **Malfunction Indicator Lamp** and **High Exhaust Temperature Lamp**  
(MIL) (Red) (on DDC engines ONLY)

➔ Engine derated or shut down engaged. Regeneration locked out. Service required. Contact authorized service center.

### Other 2007 EPA Tell-Tales



**High Exhaust Temperature Lamp**  
(HET) (Yellow)

➔ Nothing. Telltale is only active when coach is below 5 mph. When illuminated, the exhaust temperature is > 750° F (400° C) This telltale can be ON in conjunction with other telltales.



**Malfunction Indicator Lamp**  
(MIL) (Red) (on DDC engines ONLY)

➔ Tell-tale indicates a failure of an emission system component. Seek service from a Detroit Diesel service facility.

### MCI Sales and Service Centers

10 East Golf Road  
Des Plaines, IL 60016 USA  
(866) 624-2622

9787 Clifford Drive  
Dallas, TX 75220 USA  
(800) 248-4942

**MCI Major Repair Center**  
520 North Spring Street  
Loudonville, OH 44842  
(877) 754-4404

14 Harmon Drive  
Blackwood, NJ 08012 USA  
(800) 262-1287

10850 Portal Drive  
Los Alamitos, CA 90720 USA  
(800) 777-4101

**Parts**  
To order parts:  
(800) 323-1238 (US)  
(800) 665-0155 (Canada/ English)  
(800) 546-3457 (Canada/Francais)

1400 Barre Street  
Montreal, QC H3C 1N4 Canada  
(800) 663-3328

1501 Albany Boulevard  
Atlantic City, NJ 08401  
(800) 263-1041

**Technical Support and  
Emergency Roadside Assistance**  
(800) 241-2947

3718 LB McLeod Road  
Orlando, FL 32805 USA  
(800) 390-0287

215 Maddox Simpson Parkway  
Lebanon, TN 37090  
(800) 927-5041



MOTOR COACH  
INDUSTRIES  
*Going further!*

[www.mcicoach.com](http://www.mcicoach.com)



### Lower, LH Console

- |                                |                                      |
|--------------------------------|--------------------------------------|
| 1. Master Run Control          | 15. Chime Switch                     |
| 2. Engine Override Switch      | 16. Reading Light Dimmer             |
| 3. Fast Idle Switch            | 17. Speaker Switch                   |
| 4. Engine Start Switch         | 18. Rear Lift Switch                 |
| 5. Auxiliary Heat Switch       | 19. Tag Axle Switch                  |
| 6. Hazard Switch               | 20. Driver Panel Lamps Switch        |
| 7. Kneel Switch                | 21. 110 Volt Switch                  |
| 8. Front Dome Switch           | 22. Entrance Door Switch             |
| 9. Interior Lights Switch      | 23. Exterior Mirror Keypad Control   |
| 10. Driver's Lamp Switch       | 24. Cupholder                        |
| 11. Parcel Rack Blowers Switch | 25. Dzus Fastener Key                |
| 12. Front Lighting Switch      | 26. Reading Light Cover Removal Tool |
| 13. Test—Reading Lights Switch |                                      |
| 14. Engine Brake Switch        |                                      |

### 2007 EPA Engine Code Retrieval—Speedometer Display



To navigate to the FAULTS screen on the speedometer alphanumeric display:

- Press the MODE button 5 times, to display the DIAGNOSTIC screen,
- Press the SET button 1 time, to display the AUTO screen,
- Press the MODE button 2 times, to display the FAULTS screen,
- Press the SET button 1 time, to display the Parameter Group Number (PGN) / "code" screen,
- Press the SET button 1 time, to display the SPN / Source screen,
- Press the SET button 1 time, to display the FMI screen.

**Engine Code Example:** 27 (4) – EGR Valve Position Circuit / Voltage Below Normal or Shorted to Low Source

**Source Code:** 0 (Engine) P (SPN): 27 (FMI): 4

### Dashboard Controls

1. Automatic Transmission Pushbutton Shift Selector
2. Heating and A/C Control Panel (4 button)
3. Driver's Fan (Defrost)
4. Front Air Gauge
5. Rear Air Gauge
6. Speedometer
7. Coolant Temperature Gauge
8. Oil Pressure Gauge
9. Voltmeter Gauge
10. Fuel Gauge
11. Tell-tale Clusters
12. Windshield Wipers and Washers
13. Vent
14. Wheelchair Lift Master Toggle Switch with Self Cancelling Flip Cover
15. Entrance Door Air Dump Valve
16. Park Brake Valve
17. Steering Column Adjustment
18. Headlight Dimmer Footswitch
19. Left/Right Turn Signal Footswitches
20. Instrument Panel
21. Cruise Control ON/OFF Switch (Special)
22. Cruise Control Set/Resume Switch (Special)
23. Hands Free Public Address System (Special)
24. Hands—Free Microphone / Recording System Footswitch (Special)
25. Horn Heelswitch
26. Driver Cupholder
27. Horn
28. SmarTire SmartWave

